

No. 516 Hopper Car

1. TP-SF00105
Hopper Brake Wheel (Brass)
- TP-OF00030
Hopper Brake Wheel (Nickel)
2. TP-MS00074 - Nut 4/40
3. TP-SF00043 - Hopper Coal Pile
4. Undefined
5. Undefined
6. TP-MS00010
Brakewheel (Brass) w/ Caps
- TP-MS00011
Brakewheel (Nickel) w/ Caps
7. TP-SF00019
Brake Wheel Shaft (Brass)
- TP-SF00073
Brake Wheel Shaft (Nickel)
8. TP-SF00017
Brake Wheel Stanchion (Brass)
- TP-SF00018
Brake Wheel Stanchion (Nickel)
9. Undefined
10. TP-ST00013 - Cotter Pin
11. TP-OT00028 - Washer
12. Undefined
13. TP-MS00020
Coupler Long Shank w/Spring
14. TP-MS00026- Coupler Pin
15. TP-MS00025 - Coupler Pocket
16. Undefined
17. Undefined
18. TP-ST00038 - Wheel
19. TP-MS00041 - Journal (Brass)
- TP-MS00042 - Journal (Nickel)
- TP-MS00043 - Journal (Copper)
20. TP-ST00028 - Truck w/o Pickup
21. TP-ST00036 - Truck Crossbrace
22. TP-ST00010 - Axle

